
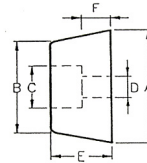
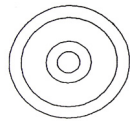


Bumper - PVC and Rubber - Screw or Rivet Mount

Secure mounting by screw or rivet.

Part Number	Outside Dia. A	B mm	C mm	Mount Hole D	Height E	F mm	Material	Fastening Screw or Rivet
25-PFS1207	11.5	8.7	5.6	3.2	7.4	3.3	Rubber	#4 or M3
25-PFS1608	16.0	13.0	6.0	3.0	7.8	4.0	Rubber	#4 or M3
25-PFS2008	20.2	18.4	10.0	3.0	8.0	4.0	PVC	#4 or M3
25-PFS2010	20.0	15.0	9.8	3.0	10.5	5.0	PVC	#4 or M3
25-PFS2015	20.0	15.0	9.4	3.5	15.0	4.0	Rubber	#6 or M4
25-PFS2325M	22.5	12.7	8.7	4.0	25.0	10.5	Rubber	#6 or M4
25-PFS2820	28.0	21.2	9.7	3.8	20.0	6.0	PVC	#6 or M4

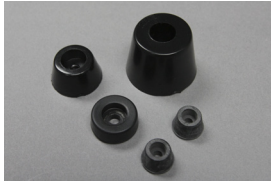


Bumper - Fast Fix

No screws - Quick labour saving assembly • Material: Thermoplastic Rubber - TPR Black

Simply place the foot into prepared 8mm hole and push centre pin for secure fixing


Part Number	Mount Hole A	Outside Diameter B	Outside Diameter C	Height D	Length E	Material
25-PFF1304	5.0	12.7	12.0	4.4	8.5	P.E
25-PFF1604	5.0	15.7	15.0	4.4	8.5	P.E
25-PFF2006	8.0	20.8	19.8	6.4	11.8	TPR
25-PFF2010	8.0	20.0	18.0	10.0	15.4	TPR
25-PFF2015	8.0	20.0	18.0	15.0	20.8	P.E
25-PFF2018	8.0	20.0	18.0	18.0	24.3	P.E
25-PFF3013	8.0	30.0	27.7	12.8	19.0	TPR

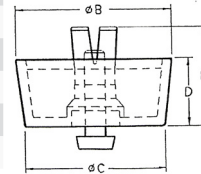


Bumper - Self Fix Rubber

No screws - Quick labour saving assembly • Natural Rubber - Black • Simply fit as you would a grommet.


Part Number	Mount Hole	Outside Diameter	Height
25-TNF08/2	5.0	8.0	2.0
25-TNF08/2.5	4.0	8.0	2.5
25-TNF10/2	5.0	9.5	2.4
25-TNF10/5	8.0	10.6	5.0
25-TNF13/4	6.4	13.0	4.2

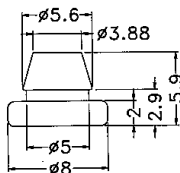


TNF08/2

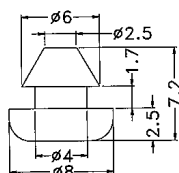


TNF08/2.5

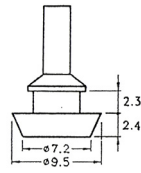

TNF10/2

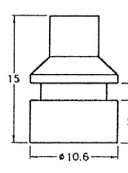

TNF10/5


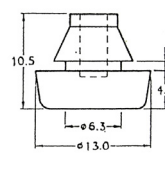


TNF13/4


Anti Vibration Mount

Material : TPE • Colour: Blue, Yellow or Purple


Part Number	Panel Hole mm	Max. Panel Thick T	Screw Hole Diameter mm
22-TGM6.3	6.3	1.6	3.9
22-TGM8.0	8.0	0.8	4.6
22-TGM9.5	9.5	1.6	4.8



TGM6.3



TGM8.0

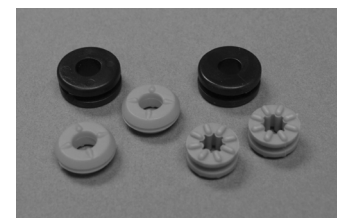

Steel screws to fit:

22-TGM-10SW, 6-32UNC

22-TGM3-10, M3 x 10mm

sales@hiq.co.nz