


Wire Saddles – Locking & Non Locking

Gather and direct wires at low cost • Provision for lock fastening of bundle • Quickly snaps into 4.8mm hole

Part Number Locking	Part Number Non Locking	A mm	W mm	H mm
18-PWS05	18-PWS05N	5	11.1	21
18-PWS09	18-PWS09N	9	11.1	27
18-PWS18	18-PWS18N	18	11.1	36
18-PWS26	18-PWS26N	26	11.1	44

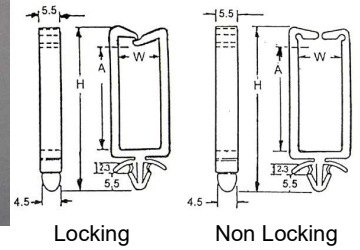


Wire Saddles - Miniature

Gather and direct wires at low cost • Clip snaps into pre-punched hole



Part Number	Panel Hole	A mm	W mm	H mm
18-PBC04	1.8	3	4.3	5.8
18-PBC06	3.0	3.6	6.3	6.4
18-PBC07	3.0	5.0	6.8	7.6
18-PBC09	3.5	8.5	8.8	11.5

Material: Nylon 6/6 Natural


18-PBC04

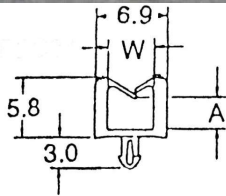


18-PBC06

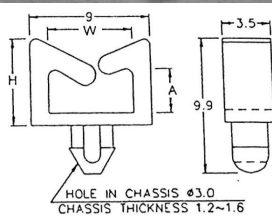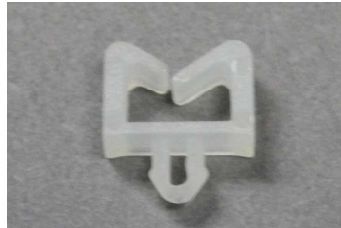

18-PBC07

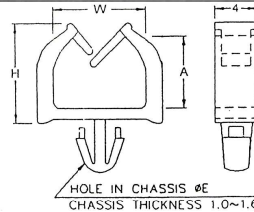


18-PBC09

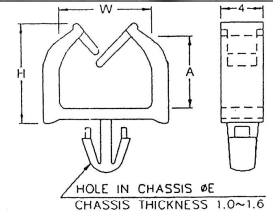


Wire Saddles– Pre-fit Snap Lock

Part Number	Panel Hole	A mm	W mm	H mm
18-PBC10	6.0	10.2	10.2	14.5
18-PBC15	6.0-6.5	15.0	10.2	15.0
18-PBC21	4.8-5.0	18.5	20.8	25.9

18-PBC15

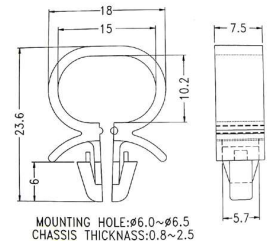

18-PBC10

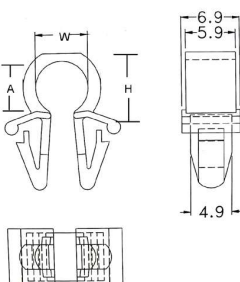

18-PBC21

